

## HOW TO ACTIVATE THIN CLIENT MODE:

If you are using a thin client, you will need to set your RollerMouse to “thin client mode” to get full functionality.

To set your product in thin client mode, please follow these steps:



1. **Make sure your RollerMouse is connected to the computer/thin client.**
2. **Hold down cursor speed and the scroll wheel for approx. 5 seconds.**



3. **The right LED light will blink to indicate you are in thin client mode.**



4. **Unplug the RollerMouse and restart the computer/thin client.**

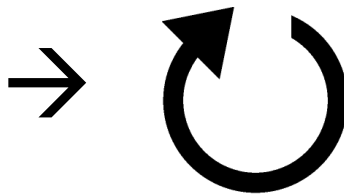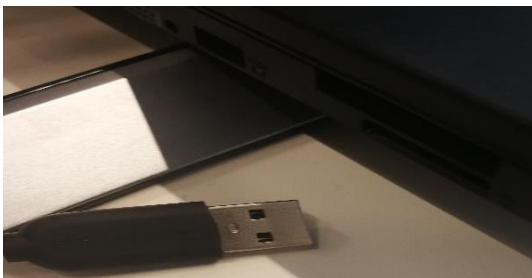

5. **Plug in your RollerMouse and log in to your system.**  
**You are now ready to use your RollerMouse in thin client mode.**

*Note: If you need to change the mode back to normal, simply redo the steps above and you will see the left LED blink in step 3 to indicate you are in normal mode.*

Should you have any questions, please contact us on: [support@contour-design.com](mailto:support@contour-design.com)