

HOW TO ACTIVATE THIN CLIENT MODE:

If you are using a thin client, you will need to set your RollerMouse to “thin client mode” to get full functionality.

To set your product in thin client mode, please follow these steps:



1. **Make sure your RollerMouse is connected to the computer/thin client.**
2. **Hold down cursor speed and the scroll wheel for approx. 5 seconds.**



3. **The right LED light will blink to indicate you are in thin client mode.**



4. **Unplug the RollerMouse, and Restart the computer/thin client.**

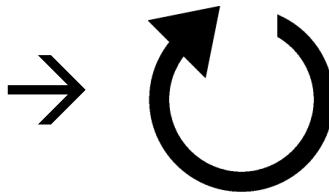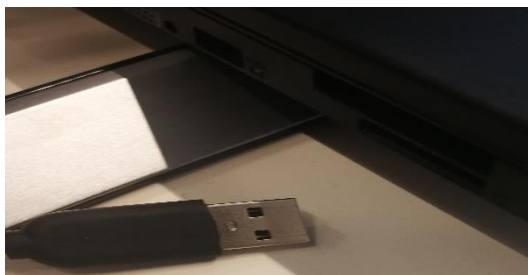

5. **Plug in your RollerMouse and log in to your system.**

You are now ready to use your RollerMouse in thin client mode.

Note: If you need to change the mode back to normal, simply redo the steps above and you will see the left LED blink in step 3 to indicate you are in normal mode.

Should you have any questions, please contact us on: support@contour-design.com